
Temperature Tester 340

Instruction Manual



Test Products International, Inc.

9615 SW Allen Blvd., Ste. 104
Beaverton, OR USA 97005
503-520-9197 • Fax: 503-520-1225
info@tpi-thevalueleader

Test Products International, Ltd.

342 Bronte Road South, Unit 9
Milton, Ontario L9T5B7
Canada
905-693-8558 • Fax: 905-693-0888

Test Products International UK Ltd

Longley House
East Park
Crawley, West Sussex RH10 6AP England
Tel: 01293 561212 • Fax: 01293 813465

L340M • 10/28/02 copyright © 2002 Test Products International, Inc.

Standard Accessories	Part No.
9V Battery	A009
4' disposable probe	GK11M
Rubber Boot (340 only)	A303

Optional Accessories	Part No.
1 Disposable K-type w/oven clip	GK12M
Heavy duty surface	CK13M
Heavy duty surface, right angle	CK14M
Heavy duty chisel probe	FK14M
Heavy duty gas (air) probe	GK17M
Soft Carrying Case	A255

MAINTENANCE

- Battery Replacement:** The 340 will display battery symbol when the internal 9 Volt battery needs replacement. Replace battery as follows:
 - Disconnect and remove all temperature probes from 340.
 - Loosen the 4 screws from the back of the 340.
 - Remove the back cover.
 - Remove old battery and replace it with new battery.
 - Reassemble instrument in reverse order from above.
- Cleaning your 340**
Use a mild detergent and slightly damp cloth to clean the surfaces of 340.